
Step 1 is to loosen up the top of the blower so the bracket can be inserted. The way your blower is attached depends on your units discharge. In most cases, it will look like either left picture (connected directly to the shroud) or the right picture (attached via a strap or bracket). Note that foam insulation (not pictured) my cover the screws. Simply scrape enough away to access the screws.

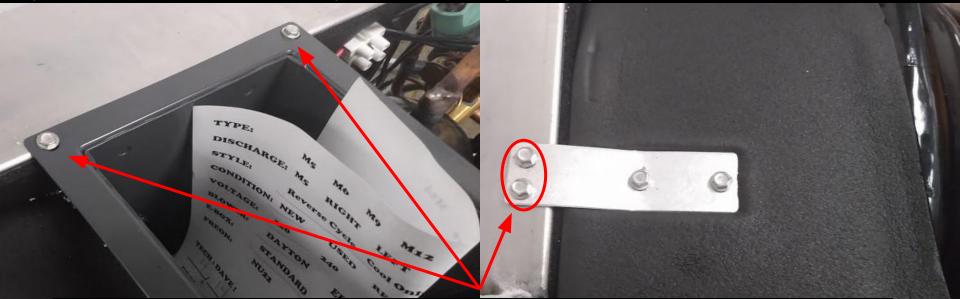

Temporarily remove these screws so blower can be separated from the shroud.

Separate the top of the blower from the shroud enough to insert the bracket between them as seen in left picture, then push the bracket all the way in as seen in the right picture.

Once bracket is in place, rescrew the previously removed screws.

Note: You do not want a gap between the blower and the shroud when done.

